


Conventional heating and cooling (up to 2 stages each)

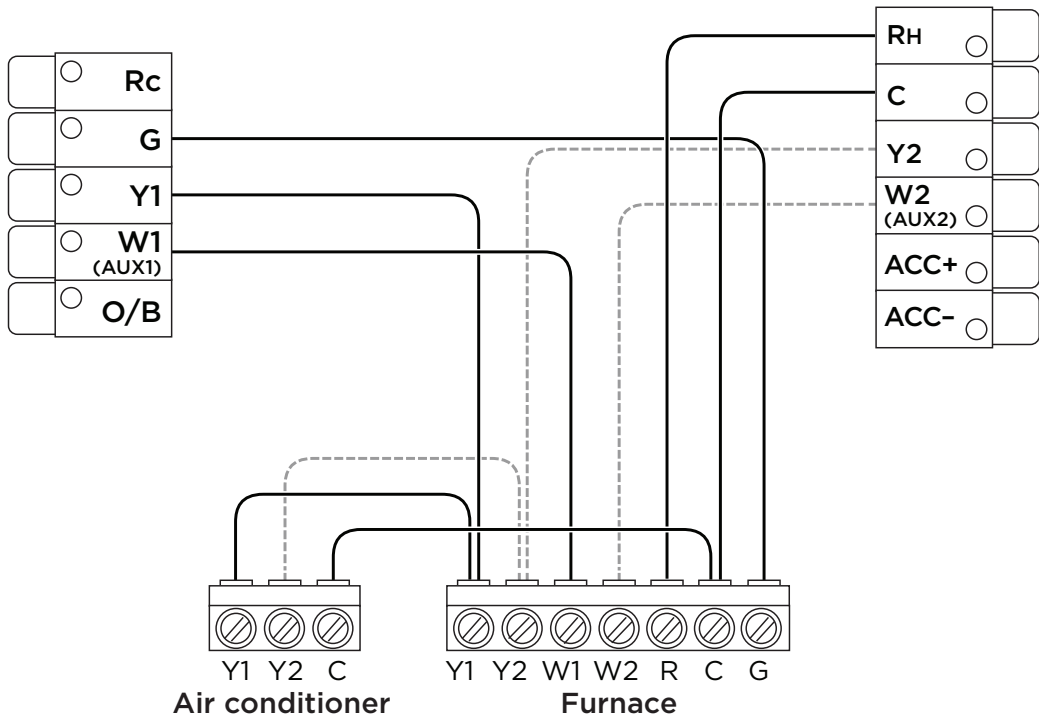

----- Stage 2 heat and cool
if applicable

Note: Do not jumper Rc or Rh, ecobee3 does this automatically. R can go into either Rc or Rh terminals on your ecobee3.