



Installation & Operation Guide



KMD-5540 CommTalk Protocol Interface

Introduction

This section provides an overview of the KMD-5540 CommTalk Protocol Interface. Illustration 1 shows the major components and their locations.

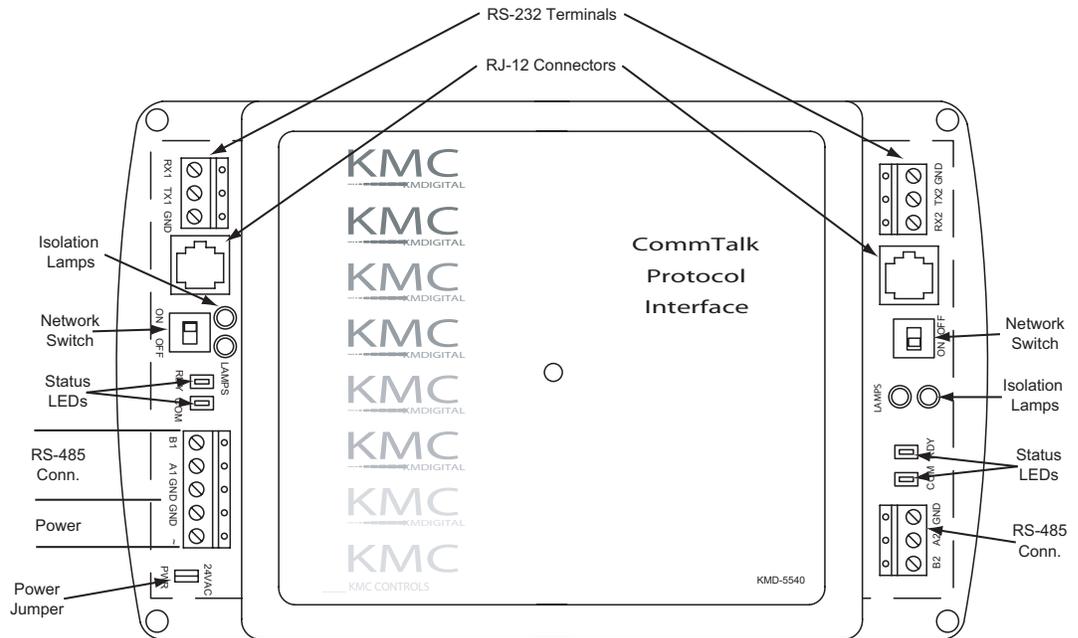


Illustration 1—Controller Components

Installation

This section provides important instructions and guidelines for installing the KMD-5540. Carefully review this information prior to attempting installation.



Note:

The actual configuration of the interface will depend on the model. KMDigital connections are made to the left side of the interface and third-party equipment is connected on the right side.

Mounting

Use the four mounting holes to securely mount the interface inside a UL-approved Enclosed Energy Management Equipment Panel or other suitable protective enclosure. See [Illustration 2—Mounting Hole Locations on page 3](#).

Output Connections

Output connections are made to the connectors on the right side of the interface. The actual connectors that appear here depend on the KMD-5540 model.

Illustrations 3 through 7 show wiring configurations for typical implementations of the interface.

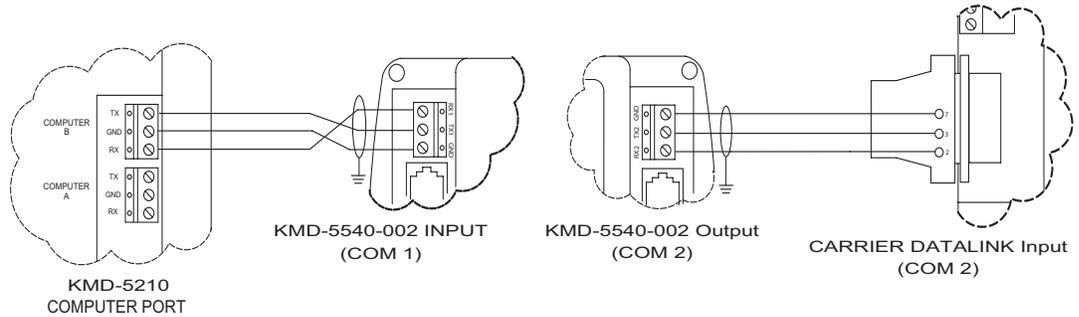


Illustration 3—KMD-5540-002 Carrier Datalink Configuration

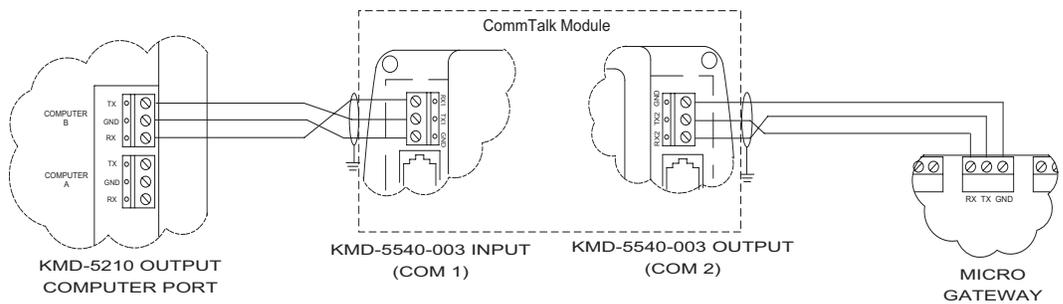


Illustration 4—KMD-5540-003 Micro Gateway Configuration

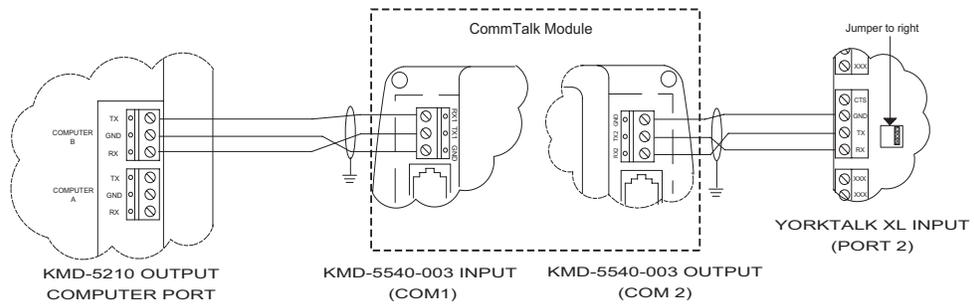


Illustration 5—KMD-5540-003 York Configuration

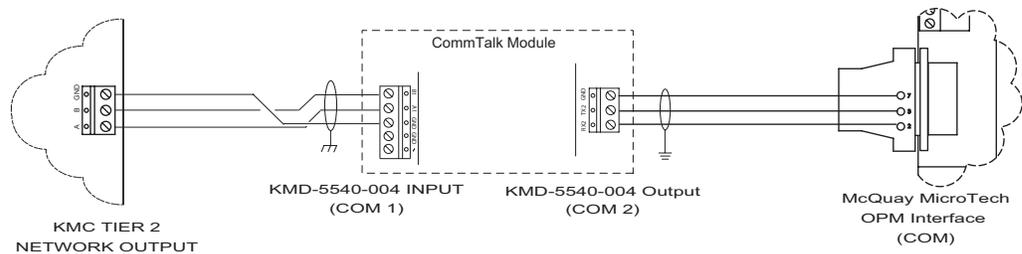


Illustration 6—KMD-5540-004 McQuay MicroTech OPM Configuration

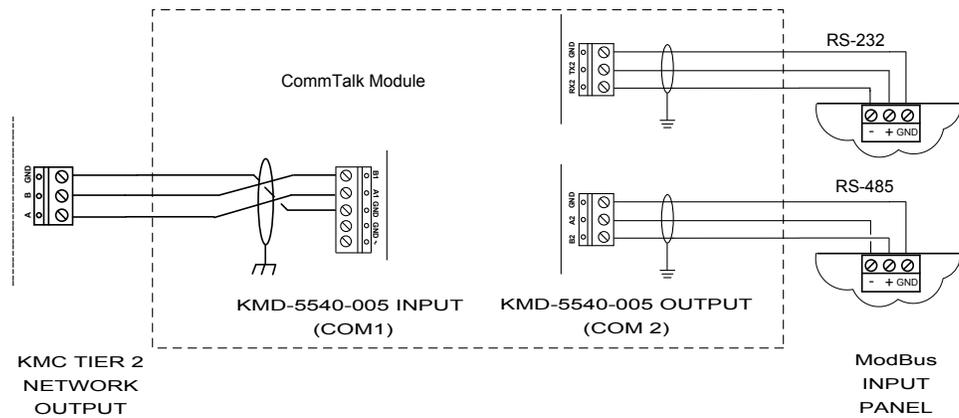


Illustration 7 – KMD-5540-005 ModBus Configuration

EOL (End Of Line) Setting

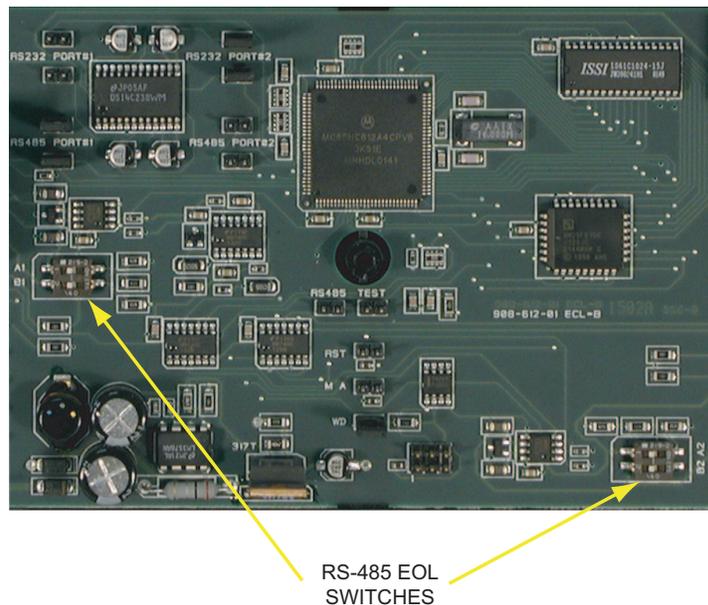


Illustration 8 – RS-485 EOL Switches

To set or confirm the EOL termination for the RS-485 connection, see Illustration 7 to locate the switches for these settings.

Proceed as follows:

1. Remove the screw at the center of the interface that secures the cover and remove the cover.
2. Locate the appropriate switch (see Illustration 8).
3. If the RS-485 connection is the End-of-Line (one set of wires under the RS-485 terminals), verify that both switches on the RS-485 switch assembly are in the ON position. Otherwise, the switches should be in the OFF position.
4. After you set/confirm the switches, reinstall the cover and screw.

Power Connection

Connect the 24 VAC supply voltage (Class 2 transformer only) to the power terminals on the lower left side of the controller. **Connect the neutral lead from the transformer to the GND terminal and the AC phase lead to the ~ (phase) terminal.** Power is applied to the KMD-5540 when the transformer is plugged in and the power jumper is in place (see *Illustration 1—Controller Components on page 2*).

Configuration

Prior to operating the KMD-5540, it must be configured using the Hardware Configuration Manager (HCM) application supplied with WinControl. See the WinControl XL User's Manual for additional information.



Note:

All devices on the same network must be configured for the same baud rate.

Operation

Once configured, programmed, and powered up, the interface requires very little user intervention.

Controls and Indicators

The following sections describe the controls and indicators found on the device.

Network ON/OFF

The network ON/OFF switch is located below the modular jack on the left side of the controller. Use this switch to enable or disable the RS-485 network connection.

Alternately, you may remove the RS-485 terminal block from the pins to completely isolate the KMD-5540 from the network.

Status LEDs

Two status LEDs are located on the left side of the controller above the power connector terminal. They are used to indicate the following:

RDY – The Ready LED blinks rapidly whenever the controller is operating normally. You can consider this the same as a power LED.

COM – The Communications LED indicates when the controller is transmitting over the RS-485 network connection.

Isolation Lamps

Two isolation lamps are located near the Network ON/OFF switch. These lamps serve three functions:

- ◆ Removing the lamps will open the RS-485 circuit and isolate the KMD-5540 from the network.
- ◆ If one or both lamps are lit, it indicates the network is improperly phased. This means that the ground potential of the KMD-5540 is not the same as other devices on the network
- ◆ If the voltage or current on the network exceeds safe levels, the lamps operate as fuses to protect the KMD-5540 from damage.

Resetting the Controller

If the KMD-5540 appears to be operating incorrectly, or is not responding to commands, you may need to reset it.



Note

Resetting the interface will restore the factory default configuration.

It may be necessary to re-configure the KMD-5540 with HCM to establish normal communications and operation.

To reset the KMD-5540, proceed as follows.

1. Remove the screw at the center of the the cover and remove the cover.
2. Locate the jumper block next to the input pull-up switches (see Illustration 9).

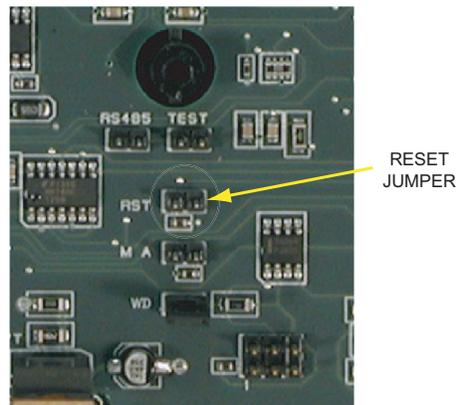


Illustration 9—Reset Jumper Block

3. Remove power to the KMD-5540.
4. Place a short on the RST pins. Use a jumper if a spare is available.
5. Power up the KMD-5540. Wait until the RDY LED begins to flash normally.
6. Remove power to the KMD-5540.
7. Remove the short from the RST jumper.
8. Reinstall the cover and screw.
9. Power up the KMD-5540 and re-configure it if necessary.

Important Notices

The material in this document is provided for information purposes only. The contents and the product(s) described herein are subject to change without notice. KMC Controls, Inc. makes no representations or warranties with respect to this document. In no event shall KMC Controls, Inc. be liable for any damages, direct or incidental, arising out of or related to the use of this document.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of KMC Controls, Inc.

Printed in U.S.A.

The KMC logo and CommTalk are trademarks of KMC Controls, Inc.

© 2013, KMC Controls, Inc. All rights reserved.

KMC Controls
19476 Industrial Drive
New Paris, IN 46553
U.S.A.
TEL: 574.831.5250
FAX: 574.831.5252
Email: info@kmccontrols.com